

Module 1 A8

Surgeons' hand wash basin

Module 1 A8, the measurements, ergonomic form and hygienic structure have been developed together with members of the health care profession.

Features

The hand wash basin is delivered ready for installation. The basin can be installed individually or as a group of basins. It is recommended that there is a gap of 100 mm between basins. It is possible to choose the installation height from a range of 800 – 1000 mm according to the requirements of the user. Delivery consists of a basin, fastening equipment, basket strainer and drain trap.

Measurements and weight

800 x 358 x 600 mm (l x h x w).
Total weight 28 kg (basin 22 kg, structure 6 kg).
The water volume of the basin 44 L (100 % full).

Structure, material

The hand wash basin is manufactured from seamless thermoformed Corain material. The structure makes the surfaces hygienic and easy to clean. The bracket structure is made from stainless steel pipe.

Installation

The basin is attached to the wall structure by one bracket. Installation instructions and a diagram of the bracket placement are included with the delivery.


Connections

Normal drains connection.
The basin has to be equipped with a wall tap.

Further information

Delivery information and mounting instructions are available from the manufacturer.

www.korallituote.fi

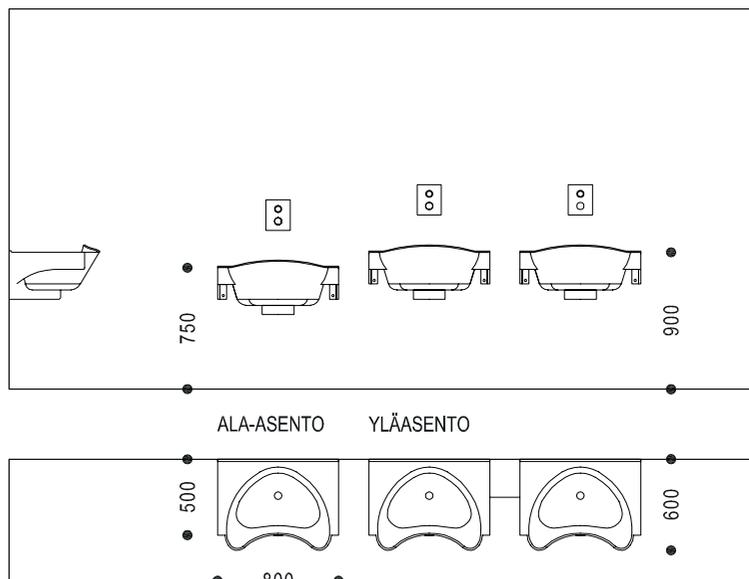

Surgeons' hand wash basin Module 1 A8